



Flat Tire Repair

ONE
ALBUQUE parks & recreation
RQUE

- 1** Release all remaining air from tube.



- 2** Use a tire lever to remove one side of the tire bead from the rim.



- 3** Completely remove tube from tire.



- 4** Inflate the tube and locate puncture. Mark location.




- 5** Release all remaining air from tube.



- 6** Scuff tube with sandpaper, apply very thin layer of glue.



- 7** Once glue has set for five minutes, remove foil from patch and apply to puncture.

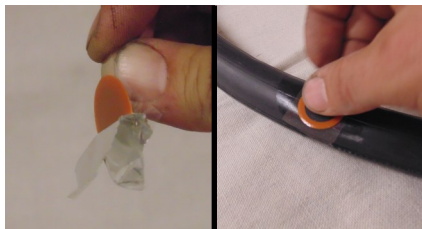

- 8** Press patch firmly for one minute. **Do not inflate tube.**



- 9** Carefully inspect inside of tire for sharp objects.



- 10** Install tube into tire, beginning with valve.



- 11** Starting near valve, push entire tire bead into rim channel.



- 12** Inflate tube to PSI specified on tire.

